


# COPIC MARKER REPLACING NIBS

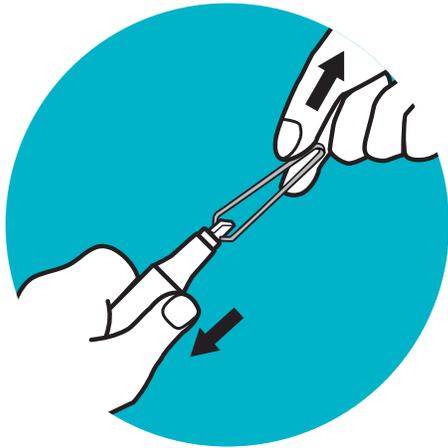


1. Using the Tweezer tool, pull the Broad nib out of the marker; for Brush nibs be sure to grip the nib firmly at the base.

2. Carefully insert the new nib.


3. The ink will wick from the inside out within a few moments.

**Tips:** If the nib is gummed up, remove from the marker and soak in blender solution until it has cleared.

**When you are refilling your markers this is also a good time to replace damaged nibs, so keep a supply of replacement tips and a pair of**

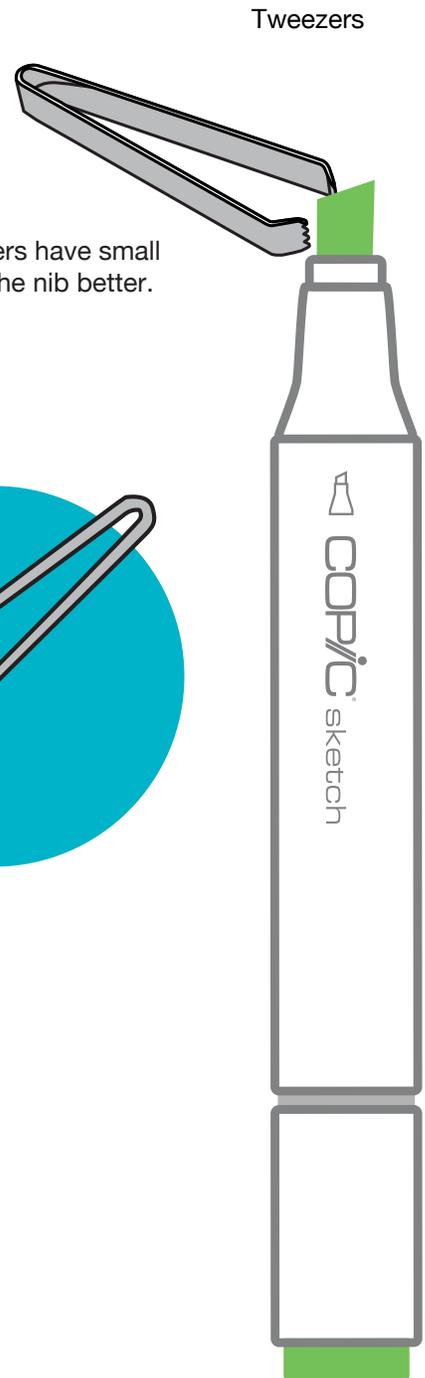

Copic Tweezers have small teeth to grip the nib better.

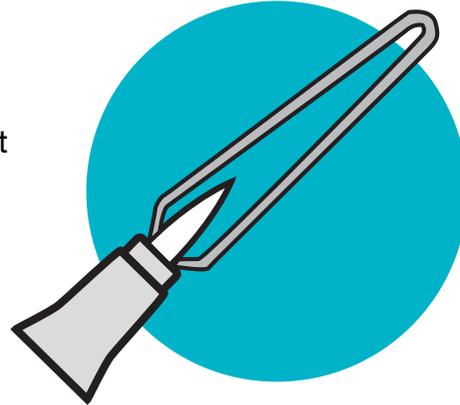

**Be Careful!**



- Frequent removal of nibs will cause poor contact with ink
- Only remove nibs when they need to be replaced (or to refill marker)
- Do not use dry or bent nibs

For questions or comments contact us at Imagination International, Inc.  
Copic Markers (541) 684-0013, or at [copicmarker.com](http://copicmarker.com)  
Copyright © 2014 Imagination International, Inc. All Rights Reserved

**.Too** Copic is a registered trademark of Too Corporation, Japan. All rights reserved.

**COPIC**<sup>®</sup>